


## QuickProbe™

### Tip and Receptacle Replacement

When a probe tip is damaged or not functioning properly, you can replace it following the steps below:

1. The entire assembly is shown here.

Receptacle: QP0209  
Tip: QP0210

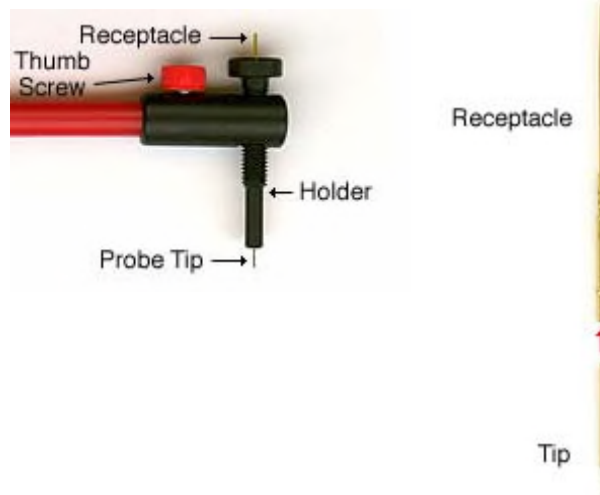

2. Loosen the red thumbscrew and remove the entire Quick Probe head assembly

3. Remove the probe tip by gently pulling it outward with a pair of needle-nose pliers.

4. Turn the head unit upside-down and push the receptacle through and out by pushing down on a soft surface (e.g. wood).



5. When replacing the receptacle and tip, reverse the process:
  - Insert receptacle
  - Push it flush with holder
  - Insert tip by hand and push into place by pushing down on soft surface